



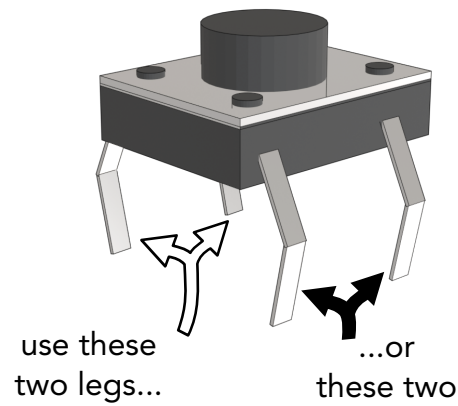

The push-button switch has four legs but you will only need to use two. Choose either pair of legs with the bend in the same direction.

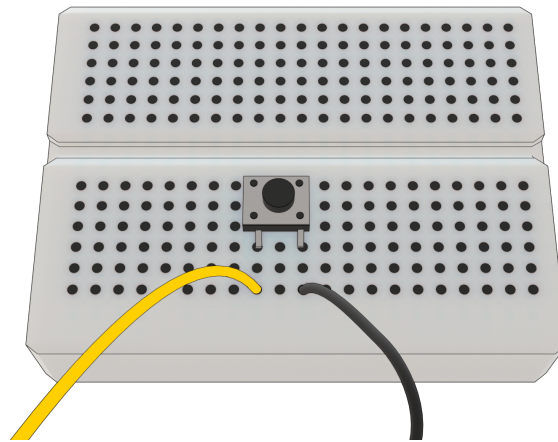

Connect your input and output wires to the legs through the breadboard. Note the legs on the far side of the switch are unused.

PUSH BUTTON SWITCH