



Changing the marble diameter parameter of the Marble Caster OnShape Design


1. Measure the diameter of your marble with calipers.
2. Open the Marble Caster file in OnShape.
3. Click the **variables** button on the right side.

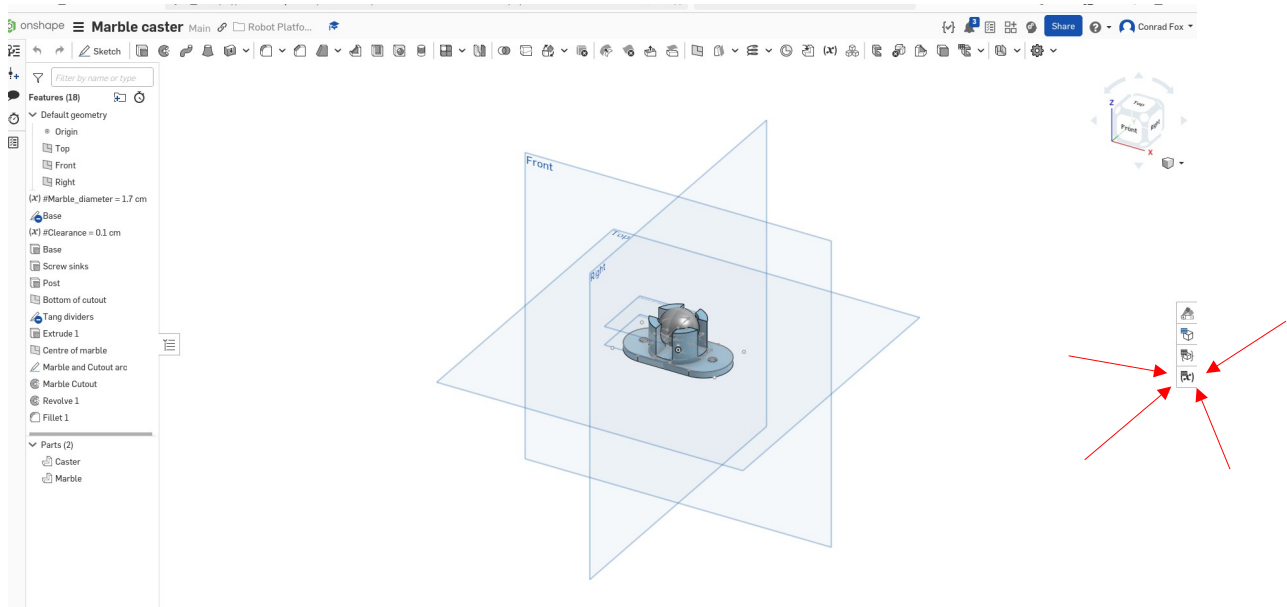

4. Enter the size of your marble in the marble_diameter line.

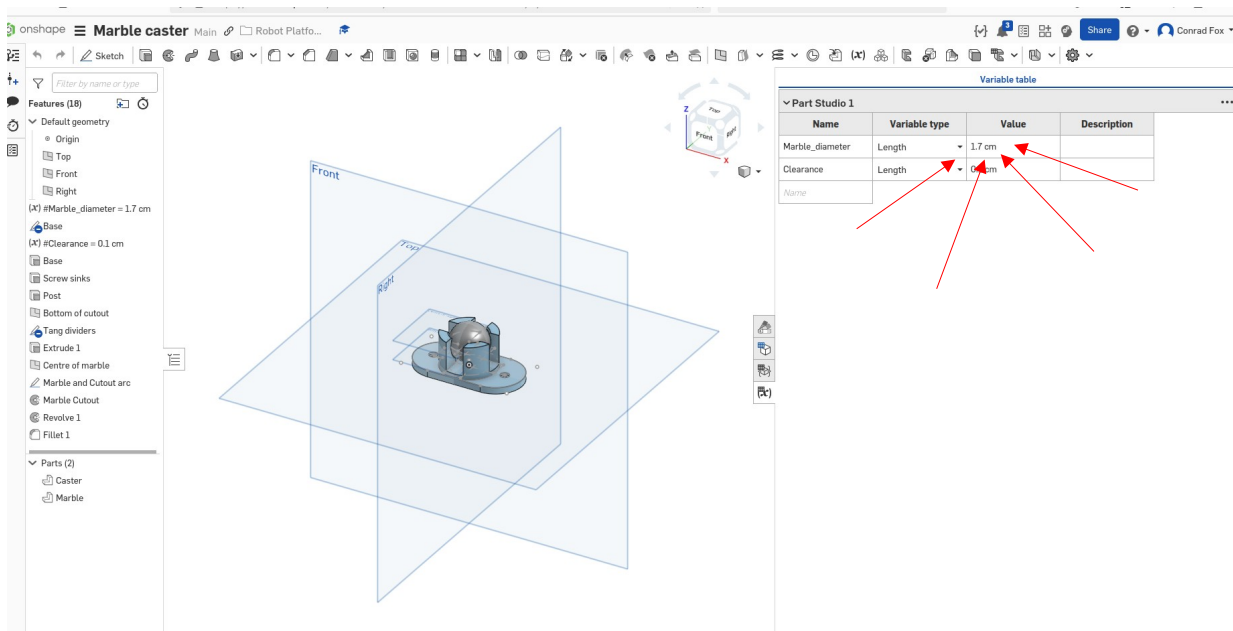

5. Right click on **Caster** in the parts list on the left and select **Export**

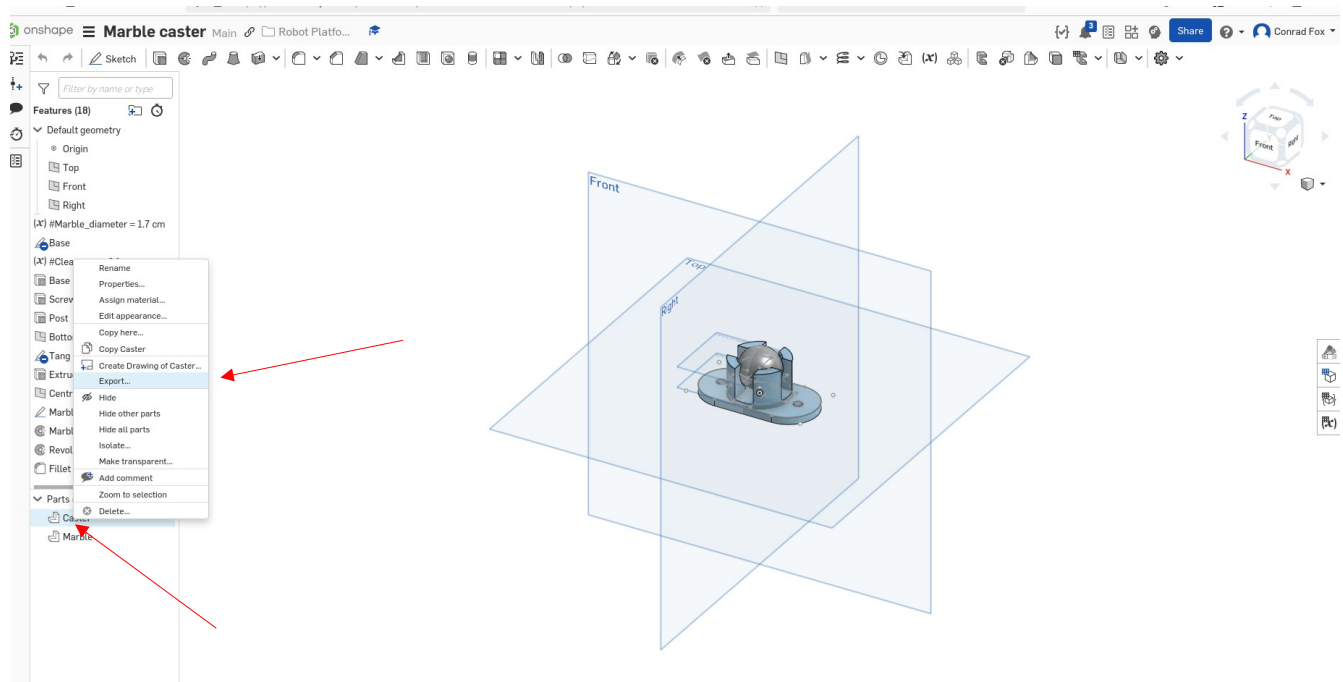

6. Save the design as an STL file

