



BIG WHEELS PRECUTS

Where a dimension is indicated as a parameter (in capital letters) you can use any value you like. You will need to measure the thickness of your cardboard to obtain a value for the CARDBOARD THICKNESS parameter.


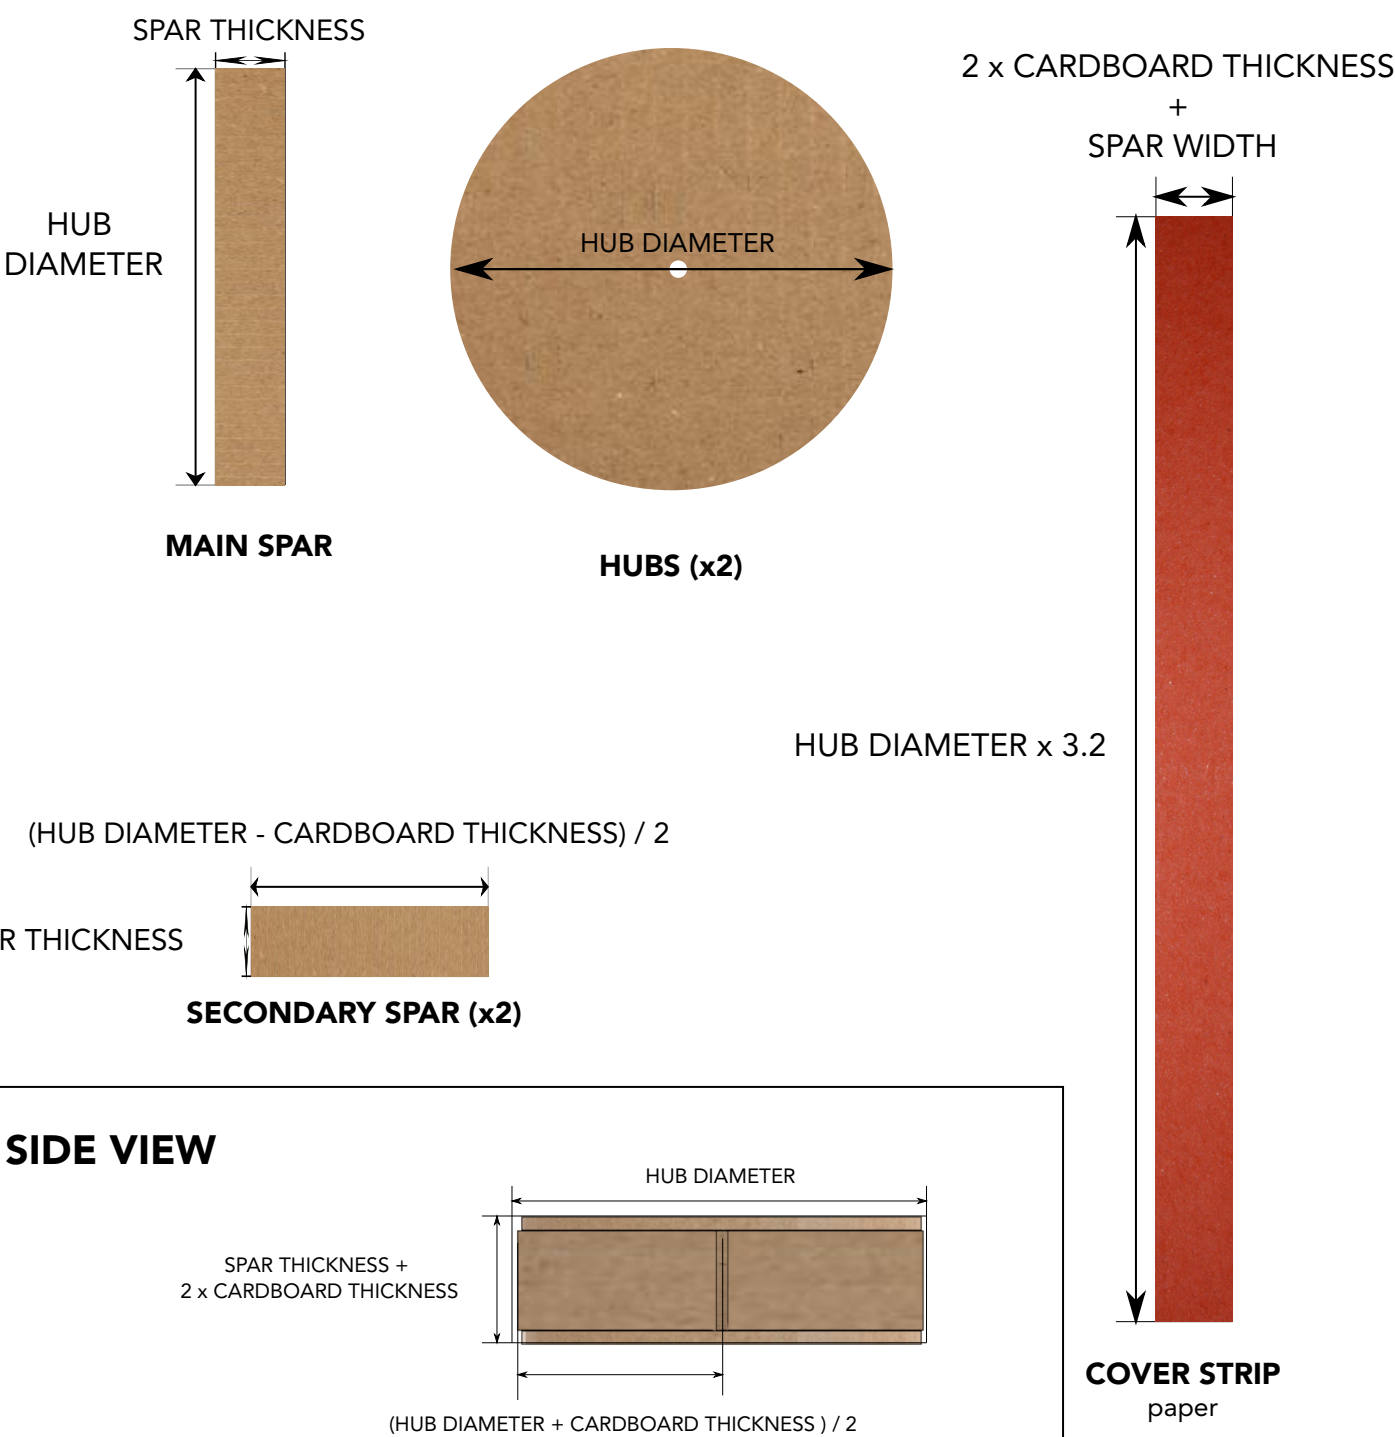


ASSEMBLY

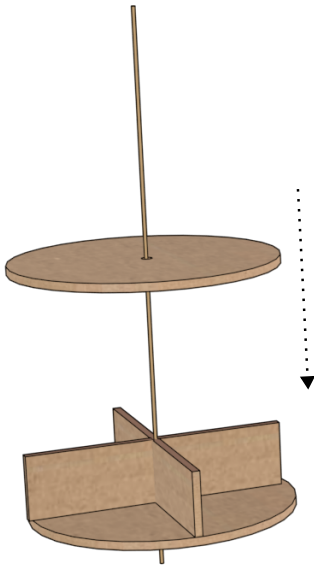

Assemble the pieces on a skewer, like a shish kebab. Arrange the spars in a cross shape between the two hubs, like a sandwich. Be careful not to glue the skewer to the pieces. You should be able to remove the skewer afterwards.

When you glue the top hub, make sure the skewer is at right angles to the assembly. Hold it in place until the glue dries..

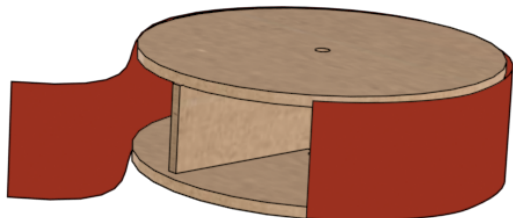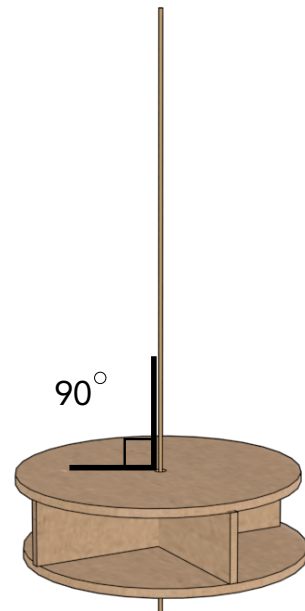

Wrap the cover strip around the hubs. If it is too much, glue extra to fill the gap. If it is too long, trim off the extra.