




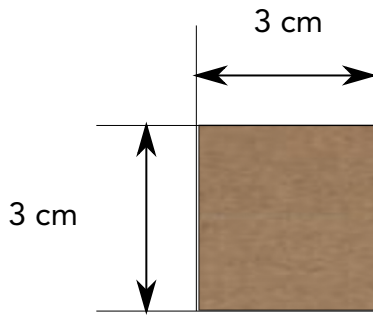


Cut out a cardboard square approximately 3cm x 3m

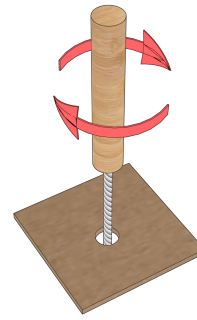


Drill a hole slightly wider than the shaft that will run inside the bearing (such as a BBQ skewer axle)

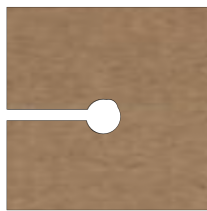

Cut a slot in the cardboard slightly narrower than the hole. The hole and slot should line up with the shaft.

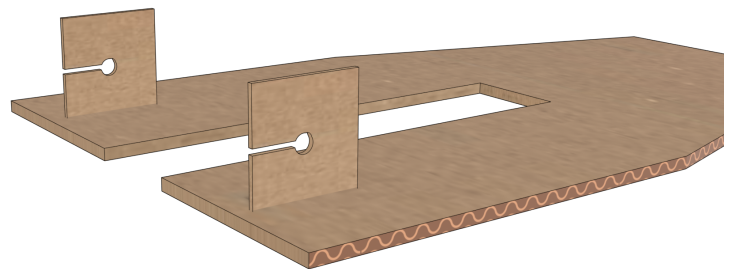

Glue the bearings to their base with the slot in the opposite direction to the force on the shaft

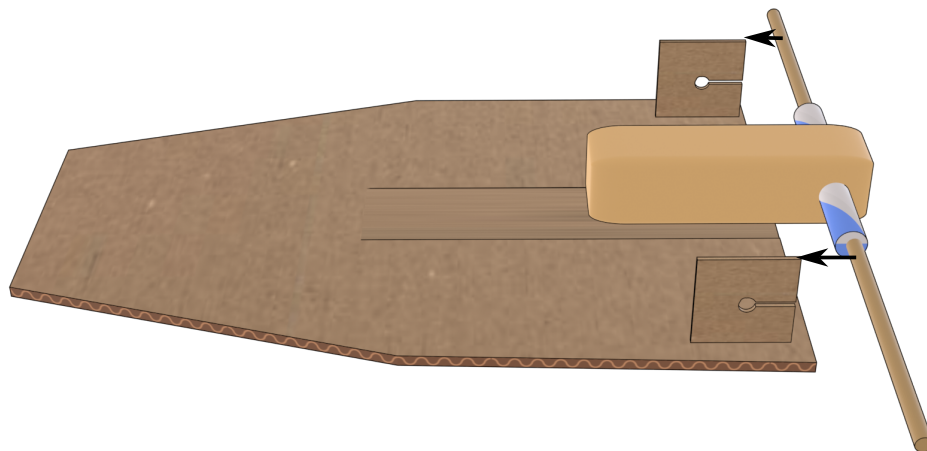

Insert the shaft into the bearings.

SLOTTED BEARINGS

