



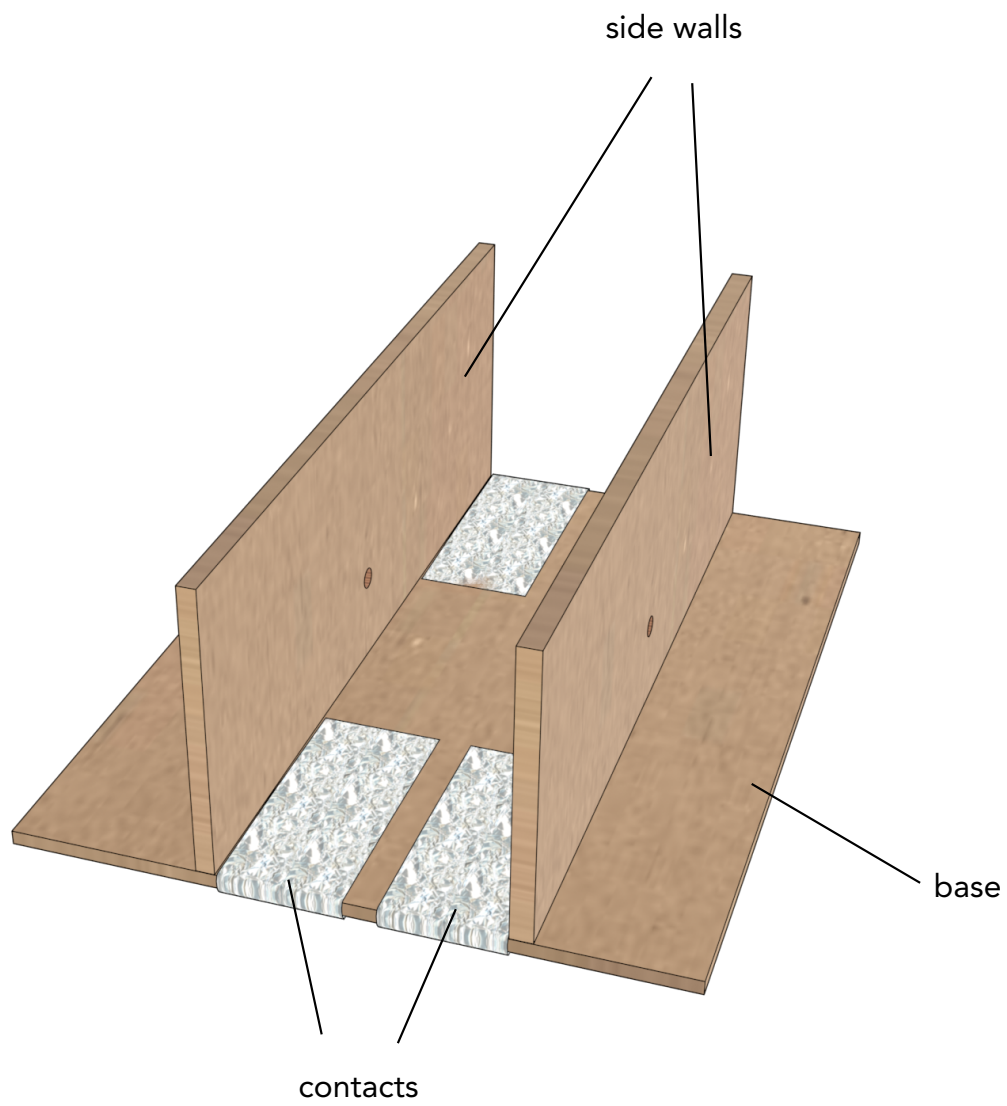

SWITCH PLATFORM

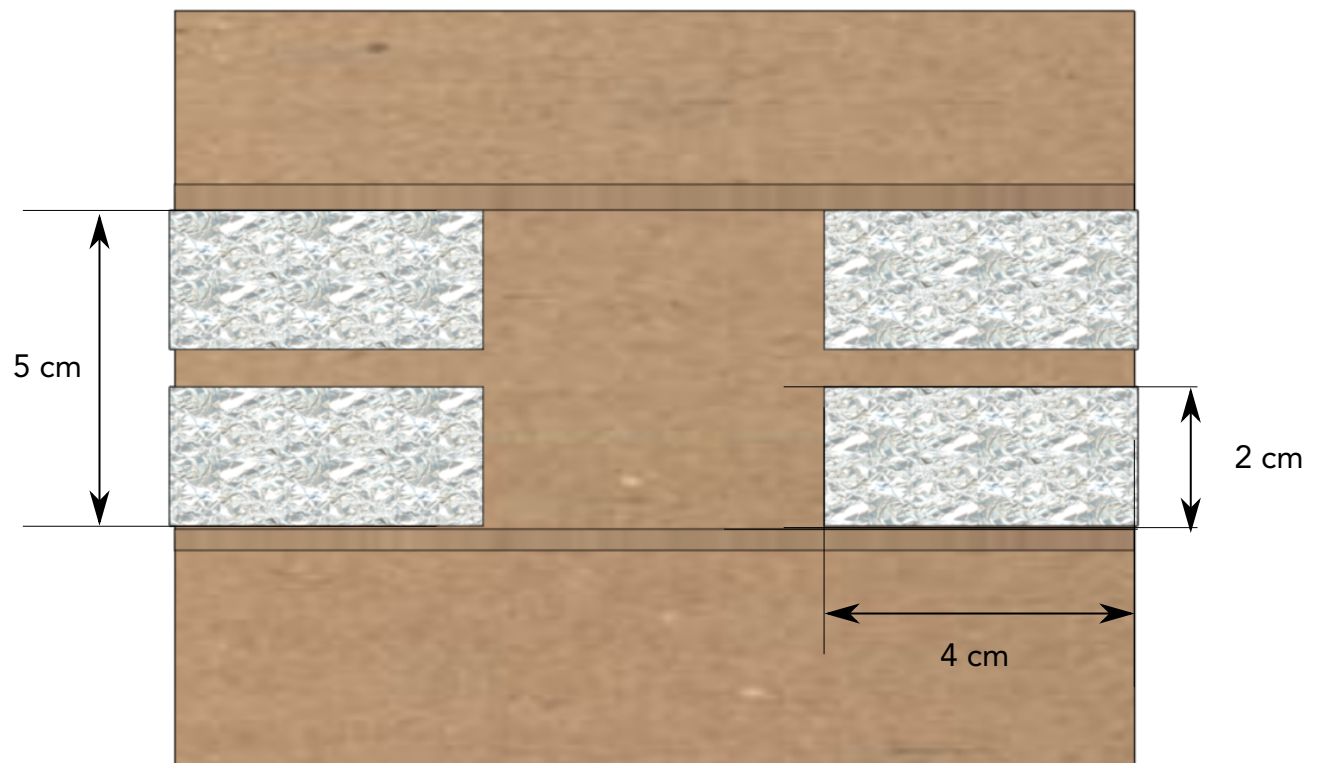

The contacts should be glued onto the top of the base,
then wrapped underneath and glued to the bottom.

