



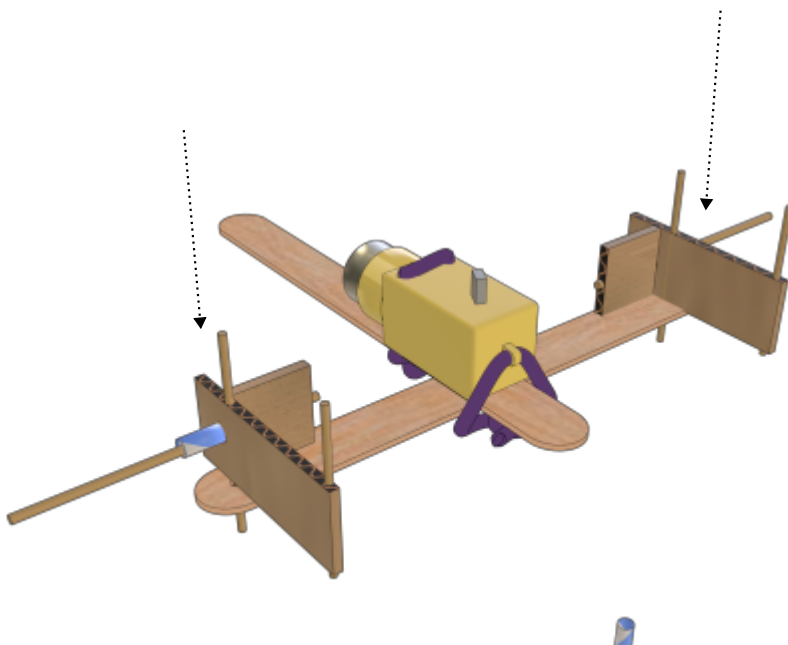

Glue one of the frame peices to the mounting bracket in a T shape. The big holes should line up.


Mount the motor to the bracket with pipe cleaners. The bracket should be on top of the frame piece. The lower motor shaft should go through the holes.

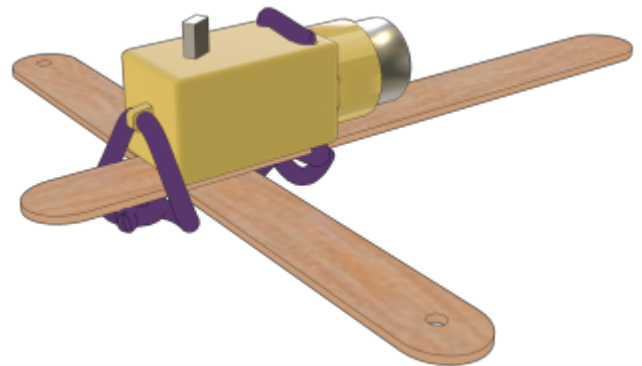


Mount the spindles to the frame by pushing the spindle pins through the holes in the end of the frame.

Note, the bearings should be inside and to the rear of the spindle arm.

STEERING FRAME

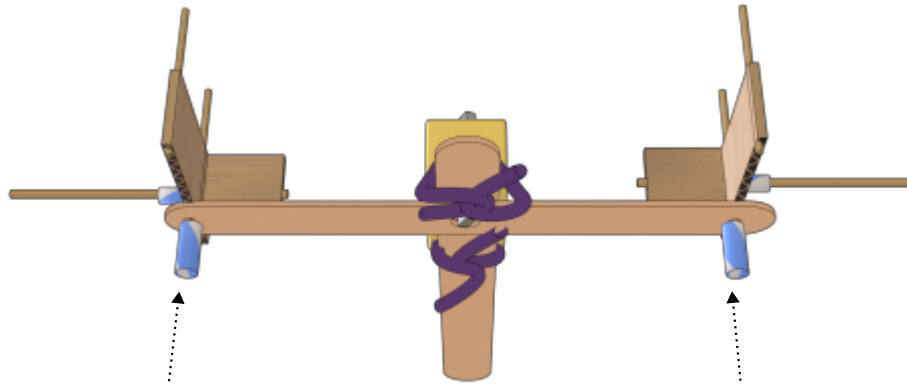

Glue caps to the bottoms of the spindle pins

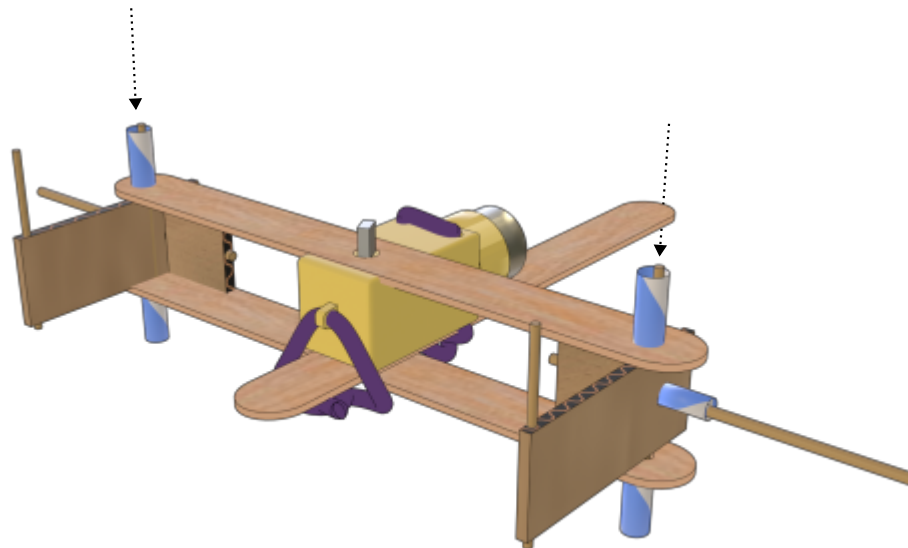

Place the upper frame over the spindle pins, then secure it in place by glueing caps to the tops of the spindle pins

Don't force the frames together too tightly. The spindles should turn freely.